

SERVICE
HISTORY



 **HONDA**

2012 ACCORD



Pre-Delivery Inspection

YEAR	MODEL	TRIM	COLOR
2012	Accord		Gray
VIN	STOCK NUMBER	DATE	TECHNICIAN
[REDACTED]	[REDACTED]	[REDACTED]	

INSTRUCTIONS: Use the appropriate service manual, owner's manual, and service bulletin to do all of the operations listed below, and mark the ☐ after completing the item. Put a line through the item if it does not apply to the vehicle.

Before Starting PDI

- ☒ Fill up fuel tank; check fuel fill door
- ☒ Check fuel gauge operation
- ☒ Remove exterior protective covering (if vehicle is being prepared for delivery to customer)
- ☒ Wash vehicle thoroughly
- ☒ Check paint finish for dents, dings, scratches, and blemishes

1. Vehicle Interior (Part 1)

- ☒ Release hood and trunk
- ☒ Check hood and trunk latch operation
- ☒ Remove items from trunk
- ☒ Check folding rear seat-back operation
- ☒ Remove interior protective plastic
- ☒ Install floor mats and anchor in place*
- ☒ Check childproof locks
- ☒ Check seat belts and operation
- ☒ Check brake pedal freeplay and parking brake adjustment
- ☐ Check clutch pedal freeplay*

2. Vehicle Exterior (Part 1)

Walk-around

- ☒ Check body fit and alignment
- ☒ Check paint finish for dents, dings, scratches, and blemishes
- ☒ Check hinges, locks, and latches (lubrication and operation)

* If applicable



3. Under Hood - Engine Cold

☒ Check battery state of charge with tester, and enter the 10-digit test code **LT62Q5210Q** (see S/B 88-023, *Battery Testing and Replacement*)

☒ Check battery cables and terminal tightness

☒ Install under-hood fuse(s)

☒ Check condition of wiring and hoses/clamps

☒ Check drive belt tension indicator

Check fluid levels

☒ Automatic transmission*

☒ Brake

☐ Clutch*

☒ Coolant (level and concentration)

☒ Engine oil

☒ Power steering

☒ Windshield washer (level and concentration)

☐ Check for fluid leaks

* If applicable

4. Under Vehicle (On Lift)

Drive vehicle onto a lift and raise it to full height

☒ Remove protective wheel/brake covers

☒ Check body panels (low view)

☒ Check tires for defects or damage

☒ Check brake lines

☒ Check suspension and brakes

☒ Check suspension bolts for torque
paint

☐ Check steering gearbox and linkage

☒ Check driveline/axles/CV boots

☐ Check manual transmission fluid level*

☒ Check for fluid leaks

☒ Check exhaust components

☒ Check clips on fuel lines

☒ Check underbody

5. Vehicle Exterior (Part 2)

Lower vehicle to half-height

☒ Install front license plate holder

☒ Install rear license plate foam blocks

☒ Check body fit and alignments

☒ Check paint finish for dents, dings, scratches, and blemishes

Lower vehicle to ground

☒ Make TPMS sensors operational
(see PDI & New Model service
bulletin)

☒ Inspect and adjust tire pressures
(see doorjamb label)

☒ Inspect wheel nut torque
108 N·m (80 lbf·ft)

☒ Check keys; check operation of
both keyless remote transmitters*

☒ Check security system operation*

☒ Manually check door locks



6. Trunk Area

- ☒ Check trim appearance and carpet fit
- ☒ Check trunk light operation
- ☒ Inspect spare tire pressure and tire mounting
- ☒ Check jack and tools
- ☒ Check emergency trunk opener operation

7. Under Hood - Engine Idling

Close hood

- ☒ Cold-start engine
- ☒ Check cooling fan operation
- ☒ Check engine coolant temperature gauge operation
- ☒ Do idle learn procedure
- ☒ Check throttle operation and idle return
- ☒ Check tachometer
- ☒ Check engine idle speed - A/C on/off
- ☒ Check for abnormal noise/vibration, in and out of gear

8. Vehicle Interior (Part 2)

- ☒ Check seat adjustments
- ☒ Check seat heater operation*
- ☒ Check tilt/telescopic steering column operation
- ☒ Install shift lock release cover (A/T)
- ☒ Enter navigation*/audio security code
- ☒ Set up navigation*/audio security code card
- ☐ Do navigation system PDI*
- ☒ Set clock (non-navigation)
- ☒ Check audio system, including CD changer*
- ☒ Check XM® Radio (do dealer rapid refresh, if necessary)*
- ☒ Check audio system steering wheel controls and voice controls*
- ☒ Check *Bluetooth*® HandsFreeLink® system operation*
- ☐ Check rearview camera operation*
- ☒ Check instrument panel brightness
- ☒ Check instrument panel indicators

* If applicable



8. Vehicle Interior (Part 2-Continued)

- ☒ Check passenger's airbag off indicator
- ☒ Check exterior lights: headlights, taillights, brake lights, turn signals and indicators, hazard lights, parking, and license plate
- ☒ Check headlight aim
- ☒ Check windshield wipers/washers
- ☒ Check driver's/passenger's auto up/down window operation
- ☐ Check moonroof operation*
- ☒ Check console compartment
- ☒ Check interior lights: ceiling, maplights*, courtesy, glove box, and vanity mirrors*
- ☒ Check horn
- ☒ Check power mirror operation
- ☒ Check accessory power sockets*

* If applicable

- ☒ Check HomeLink® transceiver*
- ☒ Check assist handle mountings
- ☒ Check sun visors
- ☒ Check interior cleanliness
- ☒ Check glove box lock/unlock*

9. Road Test

- ☐ Initialize navigation system*
- ☒ Verify shift lockout and key interlock*
- ☒ Check engine performance under all driving conditions
- ☒ Check automatic transmission operation*
- ☐ Check M/T clutch operation and shift smoothness*
- ☒ Verify that steering wheel is centered and free from vibration (tire balance)
- ☒ Verify that vehicle tracks straight
- ☒ Check for abnormal noise/vibration, wind noise
- ☒ Check for squeaks and rattles



9. Road Test (Continued)

- ☒ Check speedometer
- ☒ Check cruise control operation
- ☒ Check climate control system, including dual mode control*
- ☒ Check audio and navigation voice controls*

* If applicable

10. Final Inspection (At Delivery)

- ☒ Check battery state of charge with tester and enter the 10-digit test code 6T62Q52100 (see S/B 88-023, *Battery Testing and Replacement*)
- ☒ Remove exterior protective covering (if not previously removed)
- ☒ Remove interior protective covering (if not previously removed)
- ☒ Wash and clean vehicle
- ☒ Check paint finish for dents, dings, scratches, and blemishes
- ☒ Recheck all fluid levels
- ☒ Recheck tire pressures including spare (see doorjamb label)
- ☒ Top off fuel tank
- ☒ Remove window sticker and clean window
- ☒ Place glove box materials in glove box

I certify that a Pre-Delivery Inspection has been completed on this vehicle following Honda specifications. In addition, I also certify that all items requiring attention have been rechecked AFTER the items have been serviced, according to Honda service procedures.


PDI Technician

Date 

Quality Control Inspector

Date 



Dealership Certification

(Dealership Name)

Your authorized Honda Automobile dealer certifies that all emissions control systems preparation required by the manufacturer prior to the sale of the vehicle has been performed. Also, based on information furnished by the manufacturer, the vehicle is covered by an EPA Certificate of Conformity. Finally, based on visual inspection of emissions control devices without the removal or adjustment of any component, there are no apparent deficiencies in the installation of such devices by the manufacturer. Under the Honda Emissions Performance Warranty, if your vehicle fails an EPA-approved Emissions Short Test within 90 days or 4,000 miles from the date or mileage at the time of delivery (whichever comes first), we will adjust, repair, or replace any parts necessary to remedy the nonconformity. We will make such repairs without cost to you whether you are penalized for failing the test or not. To qualify for this coverage, you must use and maintain your vehicle according to the instructions in your owner's manual.

Dealership Authorized Signature

Date

NOTE: See your warranty booklet for details of the full emissions performance warranty coverage.

New Owner Information

The dealership has provided and the owner hereby acknowledges:

Dealer
initials

Owner
initials

Receipt of Lemon Law Materials

Receipt of Owner's Manual(s)

Review of Technology Reference Guide

Receipt of Warranty Materials

Enrollment in Owner Link

Personalized Settings Completed

Dealership Authorized Signature

Date

Owner's Signature

Date



Dealership Certification

(Dealership Name)

Your authorized Honda Automobile dealer certifies that all emissions control systems preparation required by the manufacturer prior to the sale of the vehicle has been performed. Also, based on information furnished by the manufacturer, the vehicle is covered by an EPA Certificate of Conformity. Finally, based on visual inspection of emissions control devices without the removal or adjustment of any component, there are no apparent deficiencies in the installation of such devices by the manufacturer. Under the Honda Emissions Performance Warranty, if your vehicle fails an EPA-approved Emissions Short Test within 90 days or 4,000 miles from the date or mileage at the time of delivery (whichever comes first), we will adjust, repair, or replace any parts necessary to remedy the nonconformity. We will make such repairs without cost to you whether you are penalized for failing the test or not. To qualify for this coverage, you must use and maintain your vehicle according to the instructions in your owner's manual.

Dealership Authorized Signature

Date

NOTE: See your warranty booklet for details of the full emissions performance warranty coverage.

New Owner Information

The dealership has provided and the owner hereby acknowledges:

Dealer
initials

Owner
initials

Receipt of Lemon Law Materials

Receipt of Owner's Manual(s)

Review of Technology Reference Guide

Receipt of Warranty Materials

Enrollment in Owner Link

Personalized Settings Completed

Dealership Authorized Signature

Date

Owner's Signature

Date



Maintenance Record

Regularly maintaining your vehicle is the best way to protect your investment. Proper maintenance is essential to your safety and the safety of your passengers. It will also reward you with more economical, trouble-free driving, and help to reduce air pollution.

The Maintenance Minder™ lets you know when your vehicle needs service and displays codes for the items that need attention. Those codes are explained in the owner's manual. It is essential that you have your vehicle serviced according to the items as shown on the display to retain your vehicle's high level of safety, dependability, and emissions-control performance.

Items not called out by the Maintenance Minder have different service intervals based on mileage or time.

If you normally drive in more severe conditions (very high heat, soot and dust, etc.), some items should be

served more frequently than shown by the Maintenance Minder. Refer to your owner's manual for details.

In addition to the required maintenance, make sure you follow these recommendations:

- Avoid exceeding your vehicle's load limit. Exceeding the limit places excessive stress on the engine, brakes, and other parts of your vehicle. The load limit is shown on the driver's doorjamb label, and it is also in your owner's manual.
- Operate your vehicle within the legal speed limits and on reasonable road surfaces.
- Regularly drive your vehicle over a distance of several miles.
- Always use gasoline with the proper octane rating.
- Routinely check the fluid levels and tire pressure (as shown on the label on the driver's doorjamb). Be sure to also check the spare tire.

Your authorized Honda dealer knows your vehicle best and can provide competent, efficient service. Make sure the person who does the maintenance completes the service-performed section of this booklet and resets the Maintenance Minder.

We recommend that only Honda Genuine parts and fluids be used whenever you have maintenance done. They are manufactured to the same high quality standards as the original components, so you can be confident of their performance and durability.

NOTE: If the Maintenance Minder indicator does not appear on the instrument display within 12 months after the display was last reset, change the engine oil every year.

For example, if the vehicle is rarely driven, or if the engine oil life indicator is accidentally reset, change the oil every year.

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Emboss here

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil*1 | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter*1
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt**2
Inspect water pump**2
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*1: Perform this service according to the Maintenance Minder or annually, whichever comes first.

**2: V6 models

Periodic Maintenance
(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

Emboss here

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil** | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter**
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt**
Inspect water pump**
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*1: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*2: V6 models

Periodic Maintenance
(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Emboss here

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Emboss here

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

Emboss here

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

Emboss here

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|--|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹ | <input type="checkbox"/> 2: Replace air cleaner element |
| Inspect front and rear brake wear | Replace dust and pollen filter |
| Check parking brake adjustment | Inspect drive belt |
| Inspect the following items: | <input type="checkbox"/> 3: Replace transmission fluid |
| - All fluid levels and condition of fluids | <input type="checkbox"/> 4: Replace spark plugs |
| - Brake hoses and lines (including ABS/VSA) | Replace timing belt* ² |
| - Driveshaft boots | Inspect water pump* ² |
| - Exhaust system | Inspect valve clearance (cold) |
| - Fuel lines and connections | <input type="checkbox"/> 5: Replace engine coolant |
| - Suspension components | |
| - Tie rod ends, steering gear box, and boots | |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance
(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil*1 | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter*1
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt*2
Inspect water pump*2
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

Emboss here

*1: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*2: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil*1 | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter*1
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt*2
Inspect water pump*2
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*1: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*2: V6 models

Periodic Maintenance
(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

Emboss here

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance
(check all that apply)

Mileage _____ Date _____

- | | |
|--|---|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹
Inspect front and rear brake wear
Check parking brake adjustment
Inspect the following items: <ul style="list-style-type: none">- All fluid levels and condition of fluids- Brake hoses and lines (including ABS/VSA)- Driveshaft boots- Exhaust system- Fuel lines and connections- Suspension components- Tie rod ends, steering gear box, and boots | <input type="checkbox"/> 2: Replace air cleaner element
Replace dust and pollen filter
Inspect drive belt |
| | <input type="checkbox"/> 3: Replace transmission fluid |
| | <input type="checkbox"/> 4: Replace spark plugs
Replace timing belt* ²
Inspect water pump* ²
Inspect valve clearance (cold) |
| | <input type="checkbox"/> 5: Replace engine coolant |

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Emboss here

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Periodic Maintenance

(check all that apply)

Mileage _____ Date _____

- | | |
|--|--|
| <input type="checkbox"/> A: Replace engine oil* ¹ | <input type="checkbox"/> 1: Rotate tires, check inflation and condition |
| <input type="checkbox"/> B: Replace engine oil and filter* ¹ | <input type="checkbox"/> 2: Replace air cleaner element |
| Inspect front and rear brake wear | Replace dust and pollen filter |
| Check parking brake adjustment | Inspect drive belt |
| Inspect the following items: | <input type="checkbox"/> 3: Replace transmission fluid |
| - All fluid levels and condition of fluids | <input type="checkbox"/> 4: Replace spark plugs |
| - Brake hoses and lines (including ABS/VSA) | Replace timing belt* ² |
| - Driveshaft boots | Inspect water pump* ² |
| - Exhaust system | Inspect valve clearance (cold) |
| - Fuel lines and connections | <input type="checkbox"/> 5: Replace engine coolant |
| - Suspension components | |
| - Tie rod ends, steering gear box, and boots | |

Emboss here

NOTE: Independent of the Maintenance Minder information:

- ☐ Replace brake fluid every 3 years.
- ☐ Inspect idle speed every 160,000 miles (256,000 km).
- ☐ Adjust the valves during services A, B, 1, 2, or 3, only if they are noisy.

Technician Notes:

*¹: Perform this service according to the Maintenance Minder or annually, whichever comes first.

*²: V6 models

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes: _____

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes: _____

Emboss here

Additional Service

Mileage _____ Date _____

Technician Notes:

Emboss here


Additional Service

Mileage

Date

Technician Notes:

Emboss here

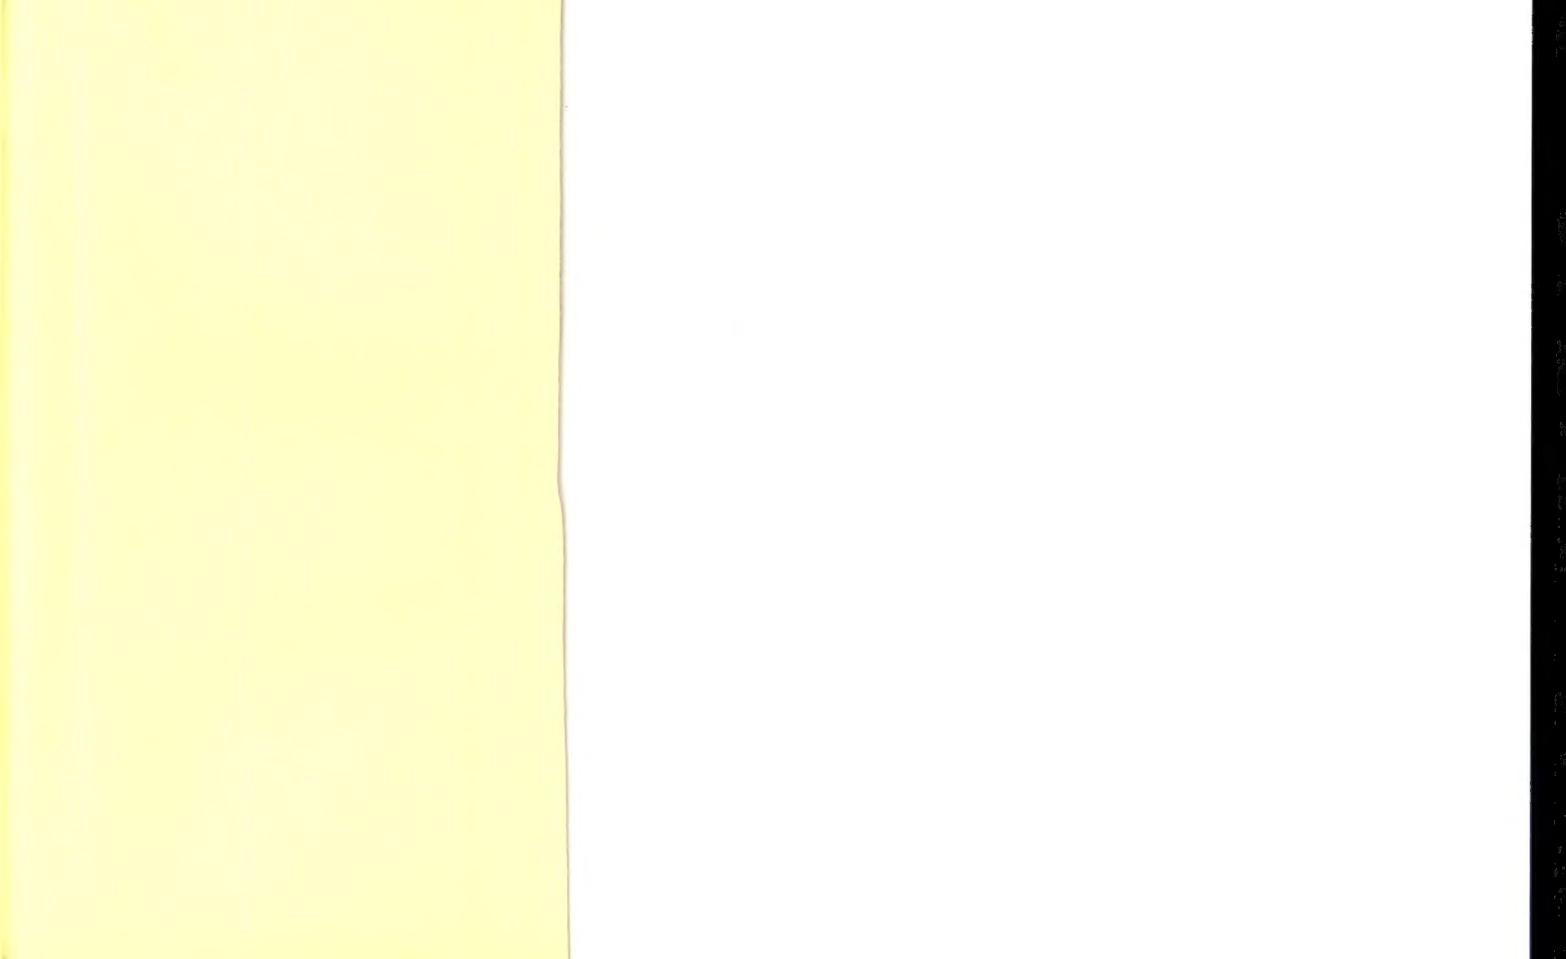

Additional Service

Technician Notes:

Emboss here





owners.honda.com

31TA5M4D
00X31-TA5-M400

2012 Honda Accord Service History
©2011 Honda Motor Co., Ltd. — All Rights Reserved

30468
©78000.2011.09.12
Printed in U.S.A.